



---

### This document Applies to:

Kingsbury N129

### Installed AV Equipment:

- Control system with touch panel
  - Ethernet connection with cable
  - HDMI & VGA device connections
  - Installed Windows Computer
  - Sound system
  - Video/Data projector
- 

## AV System Operation

If using the built in Windows computer, select **PC** on the touch panel. Press the space bar on the keyboard to wake up the computer. If necessary, power on the computer by pressing the **PC Power** button inside the podium.

Using a laptop or portable device? Connect your device and necessary adapters to the **HDMI or VGA** cable. Power on your device.

The AV system will detect your device and turn on. Your projection image will Appear within 60 seconds.

If your device is awake and connected but not projecting, unplug the adapter or cable from your device and then reconnect.

If necessary, change your device resolution to **1280x800** (or 1280x768).

---

To change the system volume; use the **Volume Up/Down** buttons on the right side of the touch panel, or slide your finger along the on-screen volume slider.

Use the **Video Mute** button to mute the display of the projector by pressing the **MUTE** button. The projector will power off if muted for longer than 10 minutes.





## Using your device with the AV system

If you are using a device that does not have VGA or HDMI output, you will need to bring your display adapter. The type of adapter you will need is determined by your device and the type of cable you wish to connect with.

### Supported connection types:



**VGA**



**HDMI**

Common adapter types include Apple Thunderbolt to VGA or HDMI and DisplayPort to VGA or HDMI. Contact the UNH Computer Store (603-862-1328) with information about your device and they will help you find the adapter you need to connect to a classroom AV system.

**To begin:** Turn on or wake up your device. If using an adapter, connect the adapter to the cable. Then connect the adapter (or cable) to your device. Select **VGA** or **HDMI** as the input source on the Main page on the touch panel.

If projector does not turn on, make sure your laptop is sending out a video signal within your display settings.

### To check your display settings:



**Mac Laptops:** Open *System Preferences > Displays > Arrangement*. Enable **Mirror Displays**. Set screen resolution to 1280x800 (or 1280x768)




**Windows Laptops:** Press and hold the WINDOWS key and tap the P key. Select **DUPLICATE**. Within Control Panel, set screen resolution to 1280x800

For older versions of Windows, press the "Fn" key along with either the key labeled CRT/LCD or this icon:



Windows Key location:

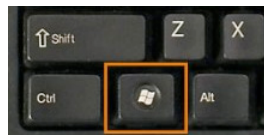

If none of the above solutions are successful in projecting your device, disconnect the cable or adapter from your device, reconnect after 5 seconds, ensure a solid connection. Re-select source on the touch panel if necessary. Still not working? Restart the device and reconnect to the system.